




Subway Pattern

Installation Best Practices and Tips.


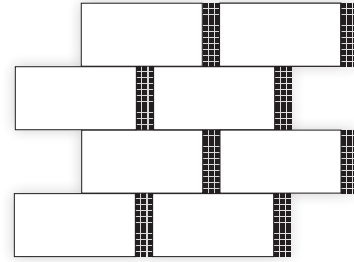


Part Numbers: 16214,16314,16514

The following instructions review the best practices found when installing the 'Subway' pattern mosaic from the Chapter 16 'Park Place' collection. Since the 'Subway' pattern mosaic is designed to be installed with virtually no grout joint there are a few extra precautions needed to ensure your installation goes as seamlessly and as easily as possible.


1 Remove Dot Sections From Outside Edge

From the backside of the mosaic use a razor blade to cut mesh freeing the entire section of dots from the outermost edge as shown on the diagram on the right. This will allow tolerances to be eased up on the mosaic just enough to make installation slightly easier. **Note: The dot sections on the inside should be left in tact as they will allow proper spacing of this piece as is being put on the installation surface.**

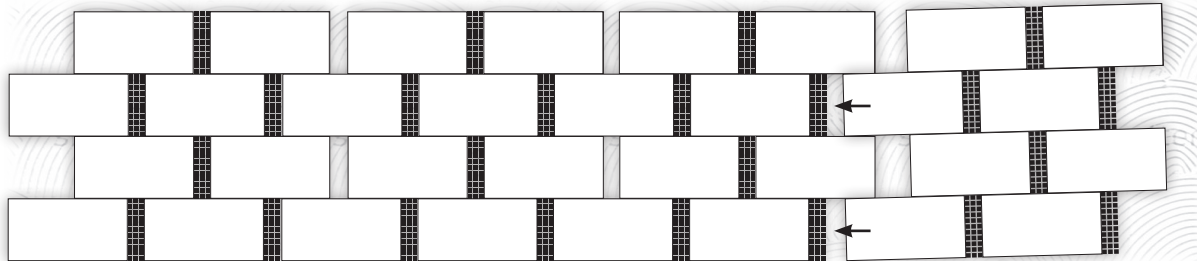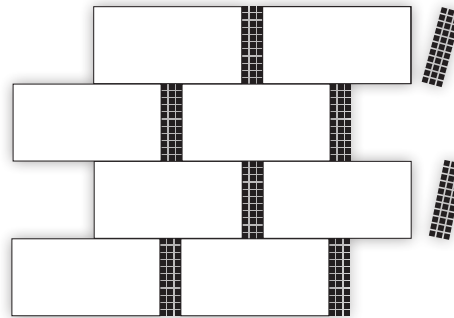

2 Install Mosaic Piece

After the dot sections have been removed from the outer edge install the piece on the desired surface. Make sure that the white 2x4 tiles are butted up against the inside dot sections to allow for proper spacing.

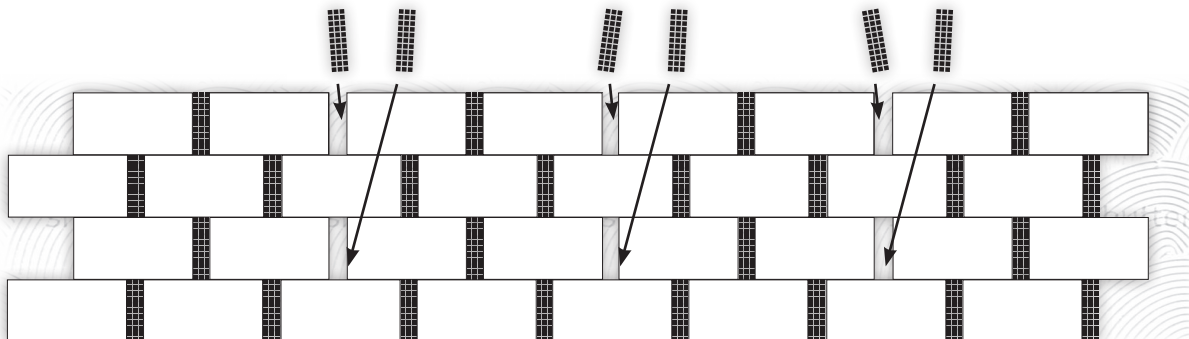

3 Replace Dot Sections

After mosaic piece has been placed in desired installation area and while thinset is still wet place removed dot sections back into their respective holes.